





- In the example above, the left most tick mark on the sliding scale is between 21 mm and 22 mm, so the number of whole millimetres is 21.
- Next we find the tenths of millimetres. Notice that the ten tick marks on the sliding scale are the same width as nine ticks marks on the fixed scale. This means that at most one of the tick marks on the sliding scale will align with a tick mark on the fixed scale; the others will miss.
- The number of the aligned tick mark on the sliding scale tells you the number of tenths of millimetres. In the example above, the 3rd tick mark on the sliding scale is in coincidence with the one above it, so the calliper reading is (21.30 ± 0.05) mm.
- If two adjacent tick marks on the sliding scale look equally aligned with their counterparts on the fixed scale, then the reading is half way between the two marks. In the example above, if the 3rd and 4th tick marks on the sliding scale looked to be equally aligned, then the reading would be (21.35 ± 0.05) mm.
- On those rare occasions when the reading just happens to be a "nice" number like 2 cm, don't forget to include the zero decimal places showing the precision of the measurement and the reading error. So not 2 cm, but rather (2.000 ± 0.005) cm or (20.00 ± 0.05) mm.

Vernier Calliper

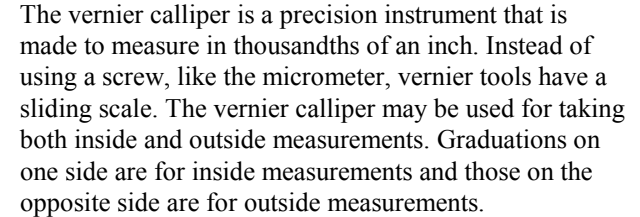

The main scale is divided into inches. Each inch is divided into 40 parts, like the sleeve on the micrometer. Each division is equal to 0.025 inch. Every fourth division is numbered 1, 2, 3 and so on, indicating 0.100, 0.200, 0.300 inch, and so forth.

The vernier scale is attached to a movable jaw that matches the fixed jaw and slides along the main scale bar. The vernier scale has 25 divisions that equal 24 divisions on the main scale. The 24 divisions on the main scale are equal to a distance of 0.600 ($24 \times 0.025 = 0.600$) inch. Thus, the value of one vernier division or space equals $0.600/25 = 0.024$. Therefore, the difference between a space on the main scale (0.025) and a space on the vernier scale (0.024) is $0.025 - 0.024 = 0.001$. It is this difference in the spaces between the main scale divisions and the vernier divisions that makes it possible to measure to one-thousandth of an inch.

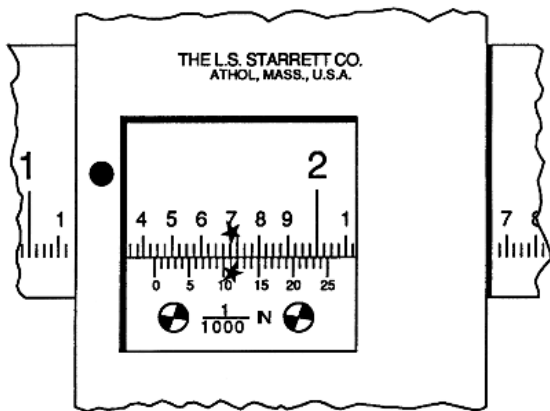

How to read the vernier calliper


Read the number of full inches that show from zero on the main scale to zero on the vernier. In the figure, this would be 1.000 inch.

Read the number of divisions on the main scale beyond the last full inch to the zero of the vernier scale. The figure shows 0.425. Note that the zero line of the vernier is between the 0.425 and 0.450 lines on the main scale.

To read the vernier scale, read along the scale until you find the line on the vernier scale that lines up exactly with a line above on the main scale. In the figure (at right), the eleventh line is correct. This means that 0.011 is to be added to the main scale reading.

The sum of the readings in the paragraphs above is the correct reading of the calliper. In the example in the figure, it would be $1.000 + 0.425 + 0.011 = 1.436$ inches.

Vernier callipers are also available with dial indicators and even digital liquid crystal display (LCD) heads which do not require interpolation (direct reading) and some convert to metric at the touch of a button.

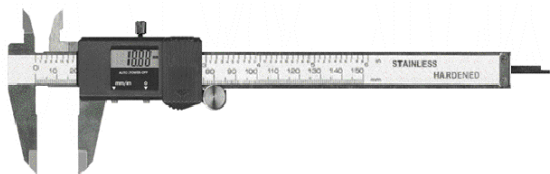

Artic Truck Parts & Service

EDSON

4318 ~ 1st Ave.

Edson, AB., T7E 1B8

Phone (780) 723-6060

Toll Free 1-877-723-6060

Fax (780) 723-2060

EDMONTON

63 Strathmoor Drive.

Sherwood Park, AB., T8H 0C1

Phone (780) 416-4444

Toll Free 1-800-667-4327

Fax (780) 416-4428

CALGARY

5351 ~ 94 Ave. SE.

Calgary, AB., T2C 4E5

Phone (403) 720-2910

Toll Free 1-800-661-1251

Fax (403) 720-3063

RED DEER

4947 Edgar Ind. Dr.

Red Deer AB., T4P 3R2

Phone (403) 348-0999

Toll Free 1-888-348-0999

Fax (403) 348-5198

Tech Tips &

Information

Artic Truck Parts & Service disclaims any liability or responsibility arising out of any inaccuracies of this information.



Vernier Calliper

